

FAA Service Description

Insert the following entries into table 1.5:

| | |
|---|--|
| "Generator" | as defined in the Fuel Security Code; |
| "Generator Compensation Instruction" | means an instruction, relating to a Generator compensation amount, which has been authorised and delivered to BSCCo by a Generator (as defined in the Fuel Security Code) pursuant to and in accordance with the Fuel Security Code; |
| "Supplier" | means a BSC Party which holds a Supply Licence and is responsible for imports and/or exports for which such BSC Party has registered one or more metering systems; |

Add a new section after '15. Declare Defaults':

16. RECORDS OF GENERATOR COMPENSATION INSTRUCTIONS

- 16.1 As instructed by BSCCo the FAA shall prepare and maintain a record for each BSC Party, setting out the following matters:
- (a) each Generator Compensation Instruction for which that BSC Party is the Generator or a relevant Supplier; and
 - (b) the amounts (in relation to that BSC Party) which are instructed amounts, the basis on which and any calculations by which such amounts have been determined, and the dates on which such amounts are due for payment.
- 16.2 As instructed by BSCCo the FAA shall provide to each BSC Party a copy of the record maintained (for that BSC Party) under paragraph 16.1 not later than 10 Working Days after the end of any month in which any entry or change is made in such record, and any other time upon the request of such BSC Party.